

**19L232-0054-G1**

# **Illustrated Parts List**

**Model Series**

**19L232-0054-G1**

**BAJA**

 
 
 
 
 
 
 


PRINTED IN U.S.A.





COPYRIGHT by BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted,  
in any form or by any means, electronic or mechanical, including photocopying,  
recording or by any information storage and retrieval system, without permission  
in writing from Briggs & Stratton Corporation.







# 19L232-0054-G1

1036      1319      1319A

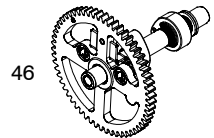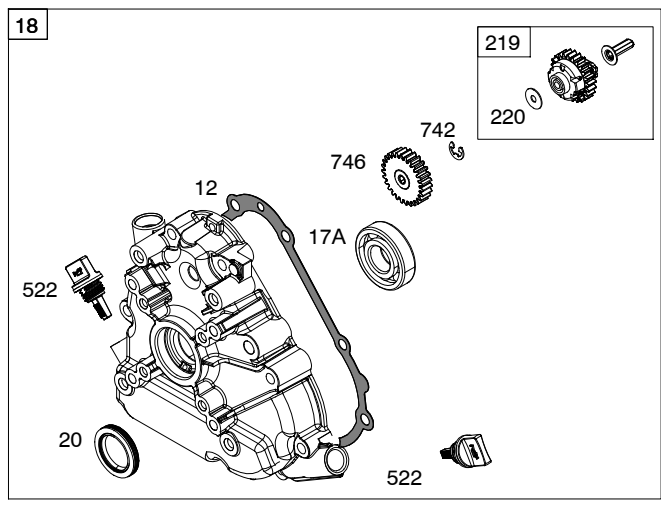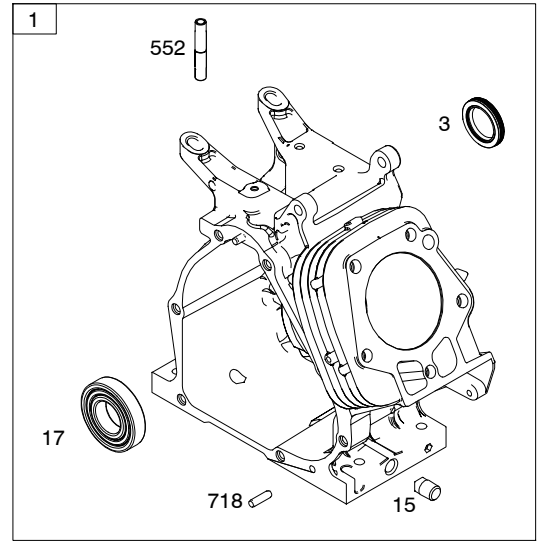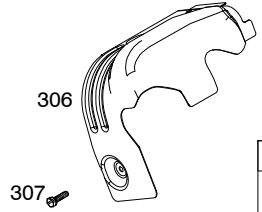

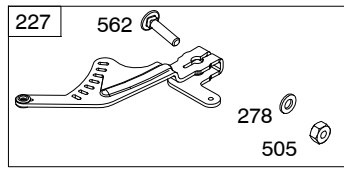







718A

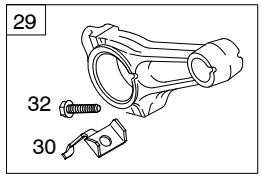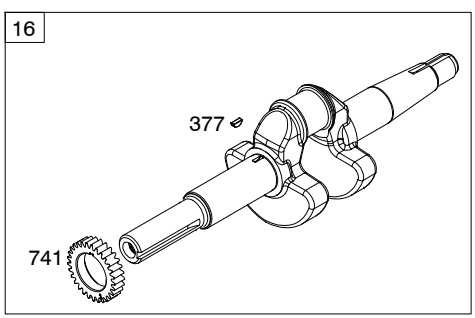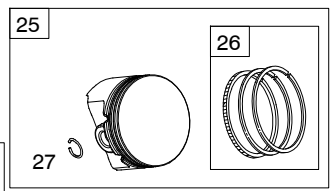    

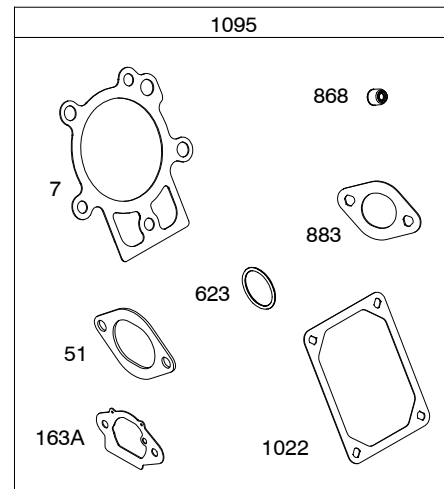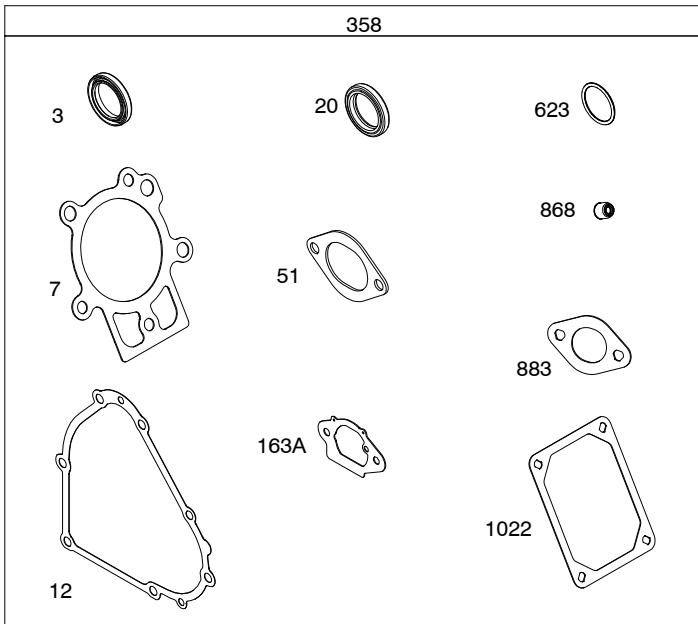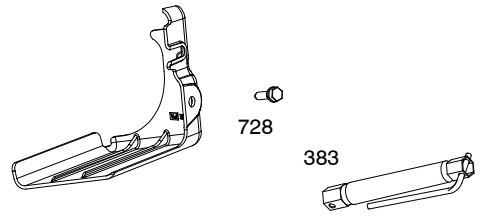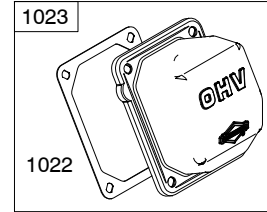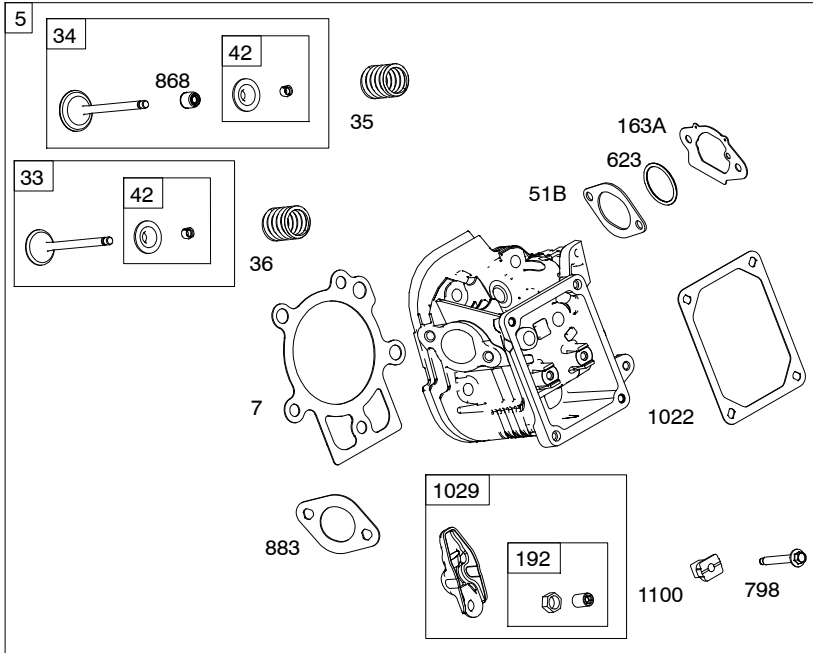      





# 19L232-0054-G1

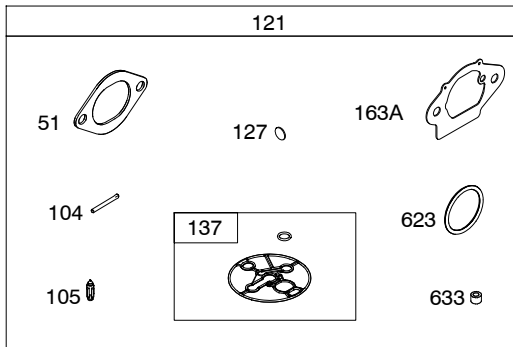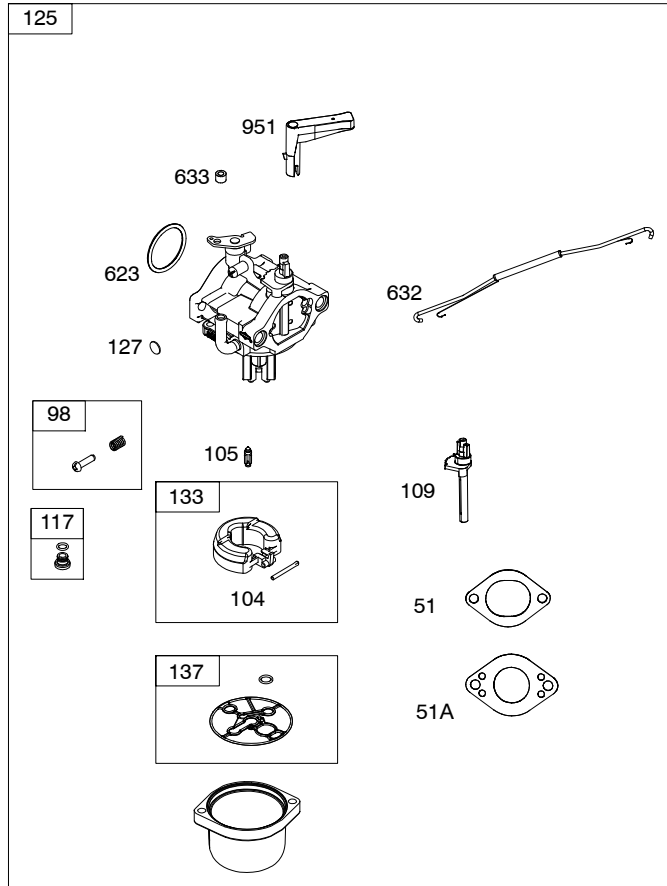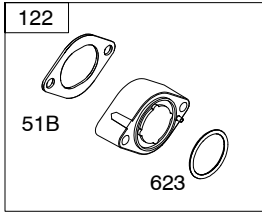   

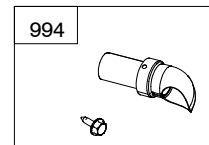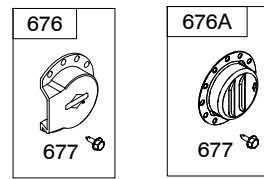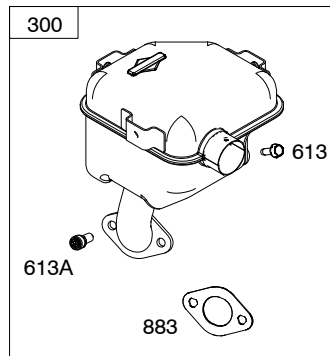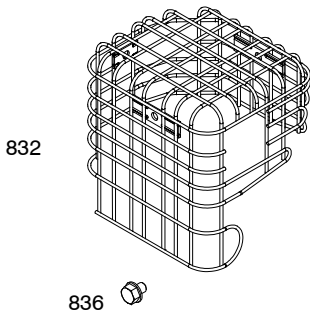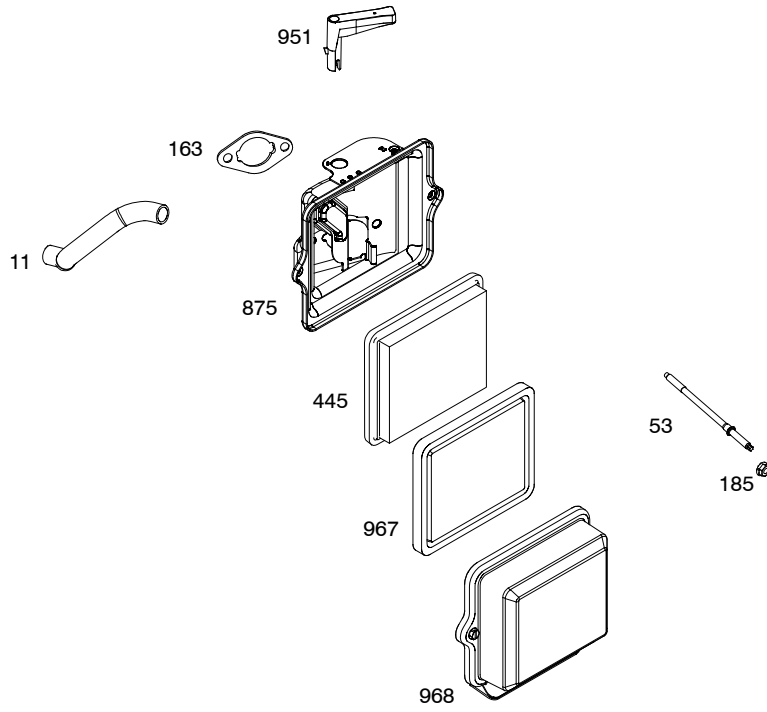     

# 19L232-0054-G1

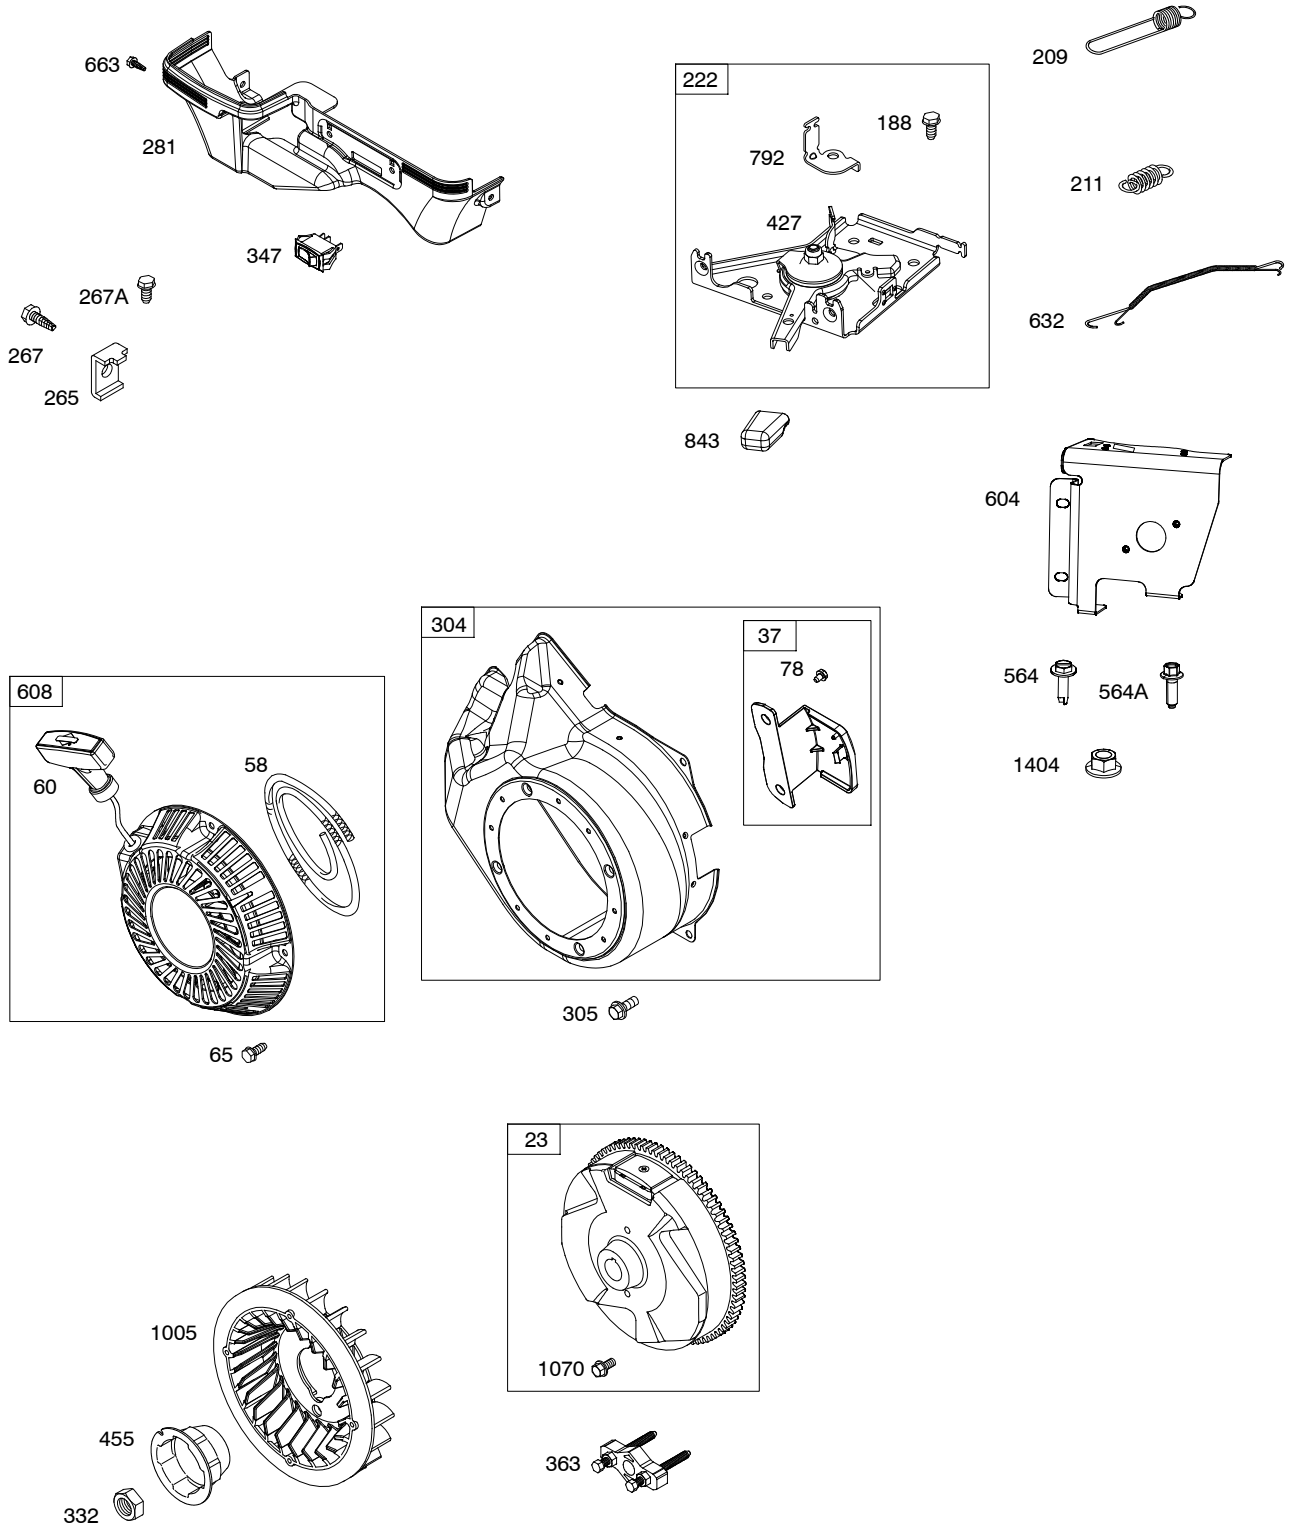 

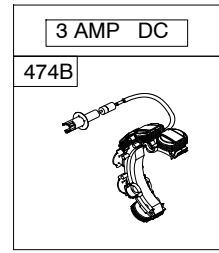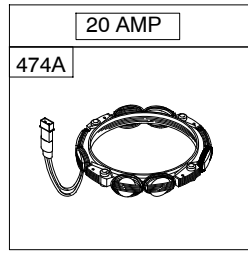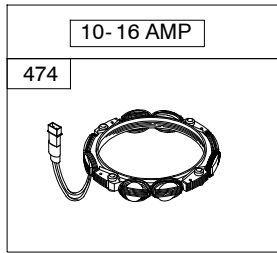   

1119

526

526A

501

501A

729

493

493B

356

318A

356A

334

333

635

578B

813

 
579

920

577

578A

578

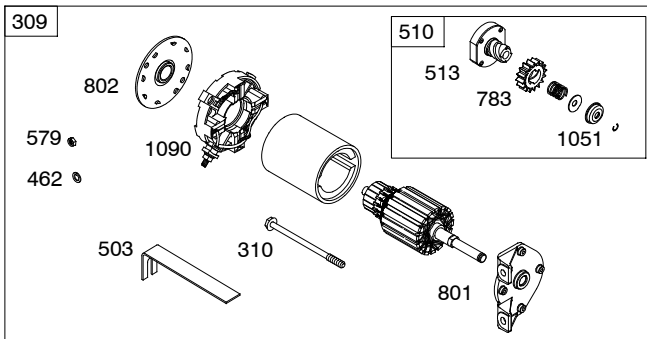

697

493A

318

892

500

664

990

# 19L232-0054- G1

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	799046	Cylinder Assembly	60	490652	Grip- Starter Rope	281	798961	Panel- Control
3	798991	Seal- Oil (Magneto Side)	65	699228	Screw (Rewind Starter)	300	593836	Muffler
5	799858	Head- Cylinder	78	795026	Screw (Flywheel Guard)	304	798994	Housing- Blower
7	694872	Gasket- Cylinder Head	98	695408	Kit- Idle Speed	305	699481	Screw (Blower Housing)
11	696796	Tube- Breather	104	694918	Pin- Float Hinge	306	798992	Shield- Cylinder
12	798807	Gasket- Crankcase	105	696136	Valve- Float Needle	307	794822	Screw (Cylinder Shield)
13	794829	Screw (Cylinder Head)	109	696735	Shaft- Choke	309	695479	Motor- Starter
15	691686	Plug- Oil Drain	117	796080	Jet- Main (Standard)	310	690323	Screw (Starter Motor)
16	590368	Crankshaft	118	796128	Jet- Main (High Altitude)	318	691693	Screw (Mounting Bracket)
17	798993	Bearing- Ball	121	799722	Kit- Carburetor Overhaul	318A	795026	Screw (Mounting Bracket)
17A	798995	Bearing- Ball	122	799766	Spacer- Carburetor	332	794824	Nut (Flywheel)
18	799084	Cover- Crankcase	125	591378	Carburetor	333	591459	Armature- Magneto
20	798991	Seal- Oil (PTO Side)	127	690727	Plug- Welch	334	699477	Screw (Magneto Armature)
22	798955	Screw (Crankcase Cover/Sump)	133	694914	Valve- Throttle	337	691043	Plug- Spark
23	794814	Flywheel	137	799991	Gasket- Float Bowl	347	697854	Switch- Rocker (Stop)
24	222698s	Key- Flywheel	163	692277	Gasket- Air Cleaner	356	695630	Wire- Stop
25	792117	Piston Assembly (Standard)	163A	798962	Gasket- Air Cleaner	356A	799721	Wire- Stop
26	792026	Ring Set (Standard)	170	794833	Stud (Crankcase Cover/Sump)	358	798800	Gasket Set- Engine
27	690975	Lock- Piston Pin	185	794838	Nut (Air Cleaner Base)	363	19203	Puller- Flywheel
28	696581	Pin- Piston	186	691764	Connector- Hose	377	690979	Key- Woodruff
29	694691	Rod- Connecting	188	699479	Screw (Control Bracket)	383	19576S	Wrench- Spark Plug
30	694692	Dipper- Connecting Rod	192	690083	Adjuster- Rocker Arm	404	795759	Washer (Governor Crank)
32	690976	Screw (Connecting Rod)	209	798959	Spring- Governor	415	691363	Plug
33	697576	Valve- Exhaust	211	798960	Spring- Governed Idle	427	798458	Nut (Control Bracket)
34	792200	Valve- Intake	219	693578	Gear- Governor	445	595030	Filter- Air Cleaner Cartridge
35	694865	Spring- Valve (Intake)	220	691724	Washer (Governor Gear)	455	794867	Cup- Flywheel
36	694865	Spring- Valve (Exhaust)	222	798478	Bracket- Control	462	691261	Washer (Starter Cable)
37	591544	Guard- Flywheel	227	799049	Lever- Governor Control	474	695466	Alternator (10- 16 Amp Regulated)
38	698557	Screw (Fuel Shut Off Valve)	265	691024	Clamp- Casing (Casing Clamp)	474A	790320	Alternator (20 Amp Regulated)
42	499586	Keeper- Valve	267	699492	Screw (M5x19mm)	474B	695730	Alternator (3 Amp DC)
45	690977	Tappet- Valve	267A	699228	Screw (Casing Clamp)	493	691177	Bracket- Mounting
46	795697	Camshaft	278	798196	Washer (Governor Control Lever)	493A	798803	Bracket- Mounting
51	694874	Gasket- Intake				493B	699048	Bracket- Mounting
51A	694875	Gasket- Intake						
51B	590396	Gasket- Intake						
53	798988	Stud (Carburetor)						
58	66574	Rope- Starter (Cut To Required Length)						



# 19L232- 0054- G1

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
500	691086	Washer (Key Switch)	614	691620	Pin- Cotter (Governor Crank)	836	593834	Screw (Muffler Guard)
501	797375	Regulator (10- 16 Amp)	616	795758	Crank- Governor	843	695588	Sleeve- Lever
501A	790325	Regulator (20 Amp)	623	799051	Seal- O Ring (Air Cleaner Elbow to Carburetor)	868	690968	Seal- Valve
503	691532	Strap- Starter	632	796324	Spring/Link- Mechanical Governor	875	591217	Base- Air Cleaner
505	793515	Nut (Governor Control Lever)	633	690722	Seal- Choke/Throttle Shaft	883	695398	Gasket- Exhaust
510	693699	Drive- Starter	635	691909	Boot- Spark Plug	892	690646	Switch- Key
513	692024	Drive- Clutch	663	699492	Screw (Control Panel)	914	794827	Screw (Rocker Cover)
522	798503	Plug- Dipstick/Fill	664	691087	Nut (Key Switch)	920	691656	Solenoid- Starter
526	690297	Screw (Regulator) (1/4- 20x.6)	676	796956	Deflector- Muffler	951	699961	Lever- Choke
526A	690326	Screw (Regulator) (1/4- 20x1.2)	676A	795336	Deflector- Muffler (Louvered)	967	491435s	Filter- Pre Cleaner
529	791822	Grommet	677	794845	Screw (Muffler Deflector)	968	791082	Cover- Air Cleaner
552	694674	Bushing- Governor Crank	697	795026	Screw (Drive Cap)	990	691959	Key Set
562	798197	Bolt (Governor Control Lever)	718	592860	Pin- Locating (Cylinder)	994	593207	Arrester- Spark
564	798496	Screw (Control Cover) (M8x25mm)	718A	695178	Pin- Locating (Cylinder Head)	1005	794815	Fan- Flywheel
564A	699492	Screw (Control Cover) (M5x19mm)	725	590347	Shield- Heat	1022	690971	Gasket- Rocker Cover
577	690795	Cable- Starter	728	699481	Screw (Heat Shield)	1023	697691	Cover- Rocker
578	798802	Wire Assembly	729	799133	Clip- Wire	1026	592673	Rod- Push (Intake and Exhaust)
578A	692306	Wire Assembly	741	691288	Gear- Timing	1029	690972	Arm- Rocker
578B	590689	Wire Assembly	742	692564	Retainer- E Ring	1036		Label- Emission (Available from a Briggs & Stratton Authorized Dealer)
579	691029	Nut (Starter Cable)	746	694679	Gear- Idler	1051	691265	Ring- Retaining
604	596595	Cover- Control	783	593935	Gear- Pinion	1070	794821	Screw (Flywheel Fan)
608	798825	Starter- Rewind	792	798550	Bracket- Fixed Speed	1090	691293	Retainer- Brush
613	794846	Screw (Muffler) (M5x14mm)	798	697890	Screw (Rocker Arm)	1095	798801	Gasket Set- Valve
613A	794844	Screw (Muffler)	801	694482	Cap- Drive	1100	791959	Pivot- Rocker Arm
			802	691286	Cap- End	1119	699772	Screw (Alternator)
			813	690635	Clamp- Regulator	1194	691876	Seal- O Ring (Plug)
			832	594652	Guard- Muffler	1319	794467	Label- Warning (Informational Warning)
						1319A	797669	Label- Warning (International Warning)
						1404	690941	Nut (Control Cover)